

# Printer List

company	Printer model
HP	<p><b>HP DeskJet :</b></p> <ol style="list-style-type: none"> <li>DeskJet 420, DeskJet 500C, DeskJet 520C, DeskJet 670C,</li> <li>DeskJet 692C, DeskJet 695C, DeskJet 710C, DeskJet 750,</li> <li>DeskJet 850C, DeskJet 870C, DeskJet 890C, DeskJet 895,</li> <li>DeskJet 1100C, DeskJet 1120C</li> </ol> <p><b>HP LaserJet :</b></p> <ol style="list-style-type: none"> <li>LaserJet III P, LaserJet 4, LaserJet 4 PLUS, LaserJet 4P,</li> <li>LaserJet 4L, LaserJet 4V, LaserJet 5P, LaserJet 5L,</li> <li>LaserJet 5M, LaserJet 6P, LaserJet 6L, LaserJet 1100A,</li> <li>LaserJet 2000C, LaserJet 2100M, LaserJet 4000, LaserJet 5000</li> </ol>
Epson	<p><b>Epson Stylus :</b></p> <ol style="list-style-type: none"> <li>Stylus Color 300, Stylus Color 400, Stylus Color 440, Stylus C4</li> <li>Stylus Color 600, Stylus Color 740, Stylus Color 800, Stylus Color 850,</li> <li>Stylus Photo 700, Stylus Photo Ex ,Stylus Photo 790 , Stylus Photo 810</li> </ol> <p><b>Epson PM :</b></p> <ol style="list-style-type: none"> <li>PM-700C, PM-750C, PM-2000C</li> </ol> <p><b>Epson EPL :</b></p> <ol style="list-style-type: none"> <li>EPL-N1600 , LQ-300K , LQ-300K+</li> </ol>
Canon	<p><b>Canon BJC :</b></p> <ol style="list-style-type: none"> <li>BJC-30, BJC-50, BJC-70, BJC-80, BJC-200, BJC-200ex,</li> <li>BJC-210, BJC-210sp, BJC-230, BJC-240, BJC-250,</li> <li>BJC-255sp, BJC-4000, BJC-4100, BJC-4200sp, BJC-4300,</li> <li>BJC 4650, BJC-6000, BJC 7000</li> </ol>
Lexmark	<p><b>Lexmark :</b></p> <ol style="list-style-type: none"> <li>XJ-350, 1100, Z11</li> </ol>
Panasonic	<p><b>Panasonic :</b></p> <ol style="list-style-type: none"> <li>KX-1121</li> </ol>