

Settings of the Wifi Printer

1、Open the file—“XPrinterV3.0C” in the folder named as “Tools” in the optical disk. Then start XPrinter software and follow the steps to set the printer. See the picture followed.



“1” Choose your Printer Model—“XP-80”

“2” Choose “USB Communicative Port” Option

“3” Click the “Print” button to test whether the printer is working.

“4” Via doing the above settings, the printer is tested to be working. Then click the “Advanced” option.

2、Click the “Advanced”. Then the corresponding window is popped up. See the picture:

The 'Advanced' settings window displays various configuration options for the printer. The 'Set Net' button under the 'Net Settings' section is highlighted with a red box.

3、Click the “Network Settings” options, and follow the steps to set up the Network information. See the following pictures:

The 'Net Setting' window is divided into two sections: 'Net Setting' and 'WIFI Setting'. The 'Net Setting' section includes fields for IP Address, NetMask, and GateWay, each with a red box and a number (1, 2, 3) indicating the steps to set them. The 'WIFI Setting' section includes fields for SSID, WIFI Key, and Key Type, each with a red box and a number (4, 5, 6) indicating the steps to set them. A 'Setting All' button is highlighted with a red box and the number 7.

“1” Set up the Printer’s IP address.

“2” Set up the Subnet Mask.

“3” Set up the Gateway.

“4” WIFI SSID address settings Note: the SSID address is the name of your Wireless Router’s name.

For example, if the address of the current Router (SSID) is: *Pinter001*, then this SSID address should be typed in the tab of “SSID”.

“5” WIFI password settings Note: the password of the Wireless Router

For example, if the WIFI’s current password is: *123456789*, then this password should be typed in the tab of “WIFI password”.

“6” Encryption type of WIFI SSID settings Note: the encryption type of the Wireless Router.

For example, if the encryption type of the Router (SSID) is: *WPA_TKIP_AES_PSK*, then this information should be selected in the tab of “SSID Encryption type”.

“7” After filling the above information, click the “Setting” option. The printer will “BEEP”. Next, restart the printer.

Wait about 30-60 seconds, a paper like the following picture would be printed. It means the printer and the wireless router is connected correctly.

