

USB2.0 EASY TRANSFER LINK CABLE FOR WINDOWS VISTA

User's Manual


1. Download the Easy Transfer driver for Windows XP
2. Install the Easy Transfer driver for Windows XP
3. Transfer files and settings between computer running Windows XP SP2 to another computer running Windows Vista.
4. Install driver for PCLinq3_Generic_3003
5. Example for files copy between the computer running Windows98 to another computer running Windows XP SP2.

1. Download the Easy Transfer driver for Windows XP

1. If you don't want to use the Windows Easy Transfer driver attached by the device, please download from the Microsoft website ,and please make sure your computer system is the authorized version , Microsoft will automatically detect and verify if it's the authorized one ; following is the download

link :<http://www.microsoft.com/downloads/details.aspx?FamilyID=2b6f1631-973a-45c7-a4ec-4928fa173266&DisplayLang=en>

2. According to your Windows XP SP2 version , please select the download language .

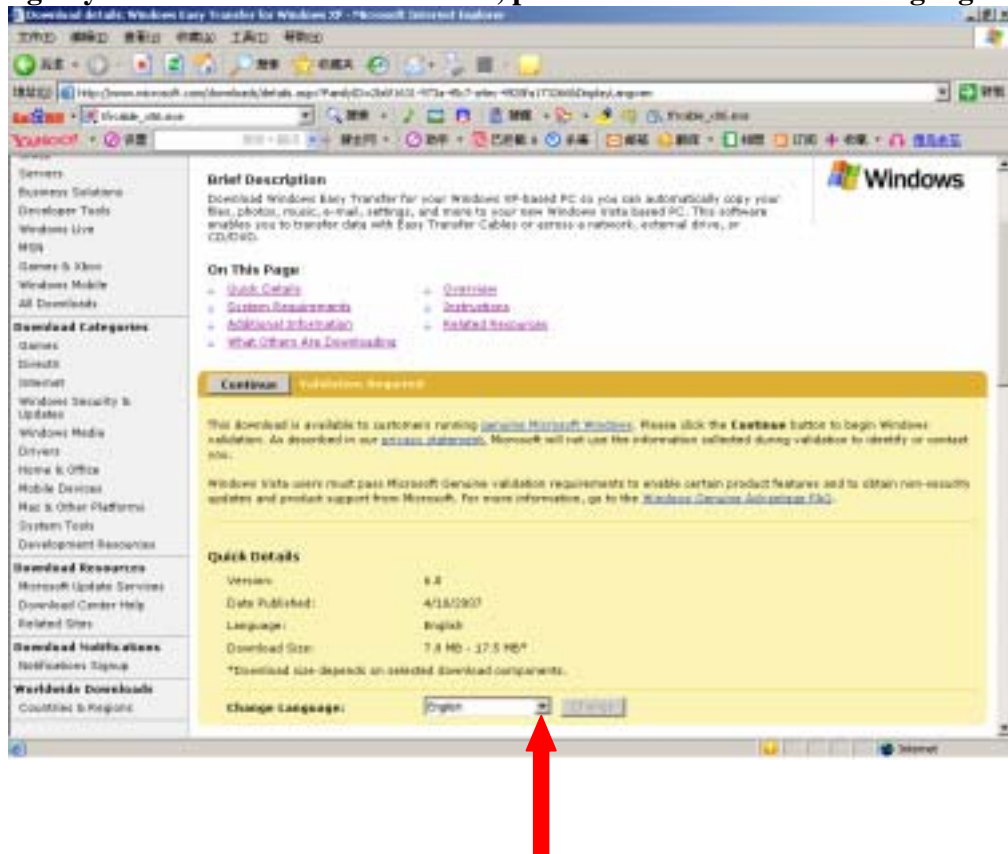

2 Install Windows Easy Transfer driver

On Windows Vista

Simply plug the adapter to the USB port on your computer and it's ready to use. No further installation is required.

On Windows XP


You must install Windows Easy Transfer first before you plug the adapter and install its driver. Please follow the steps below to proceed.

Installing Windows Easy Transfer Utility


1. Insert the provided CD into your CD-ROM drive. An auto-run screen will automatically pop up and guide you to install Windows Easy Transfer. Click Next to proceed.




2. After reading the license agreement, select **“I Agree”** and click **“Next”**.

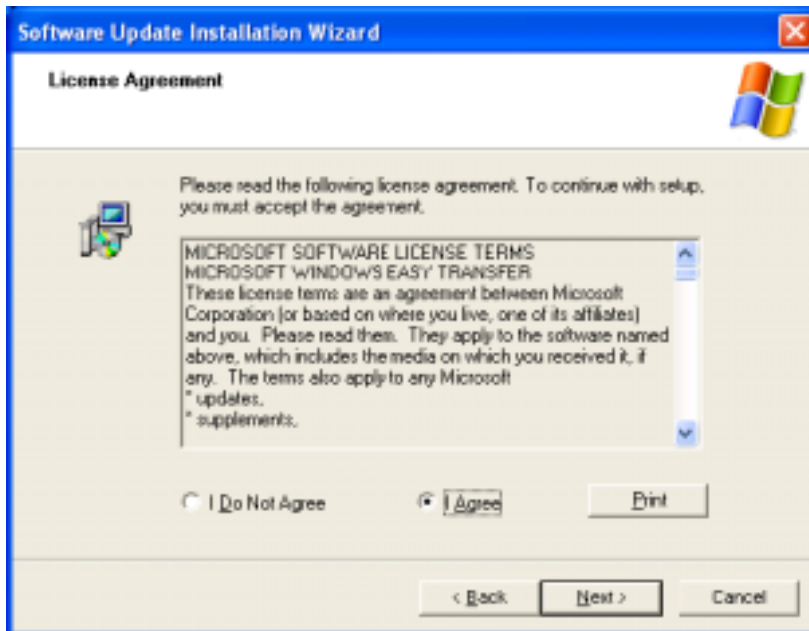

3. Wait while the installation is proceeding.

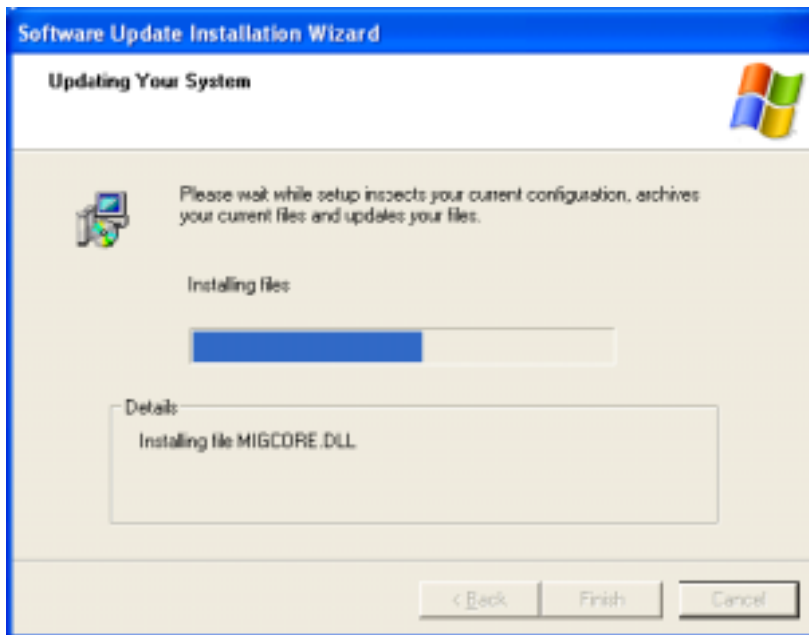

4. Click **“Finish”** to complete the installation.

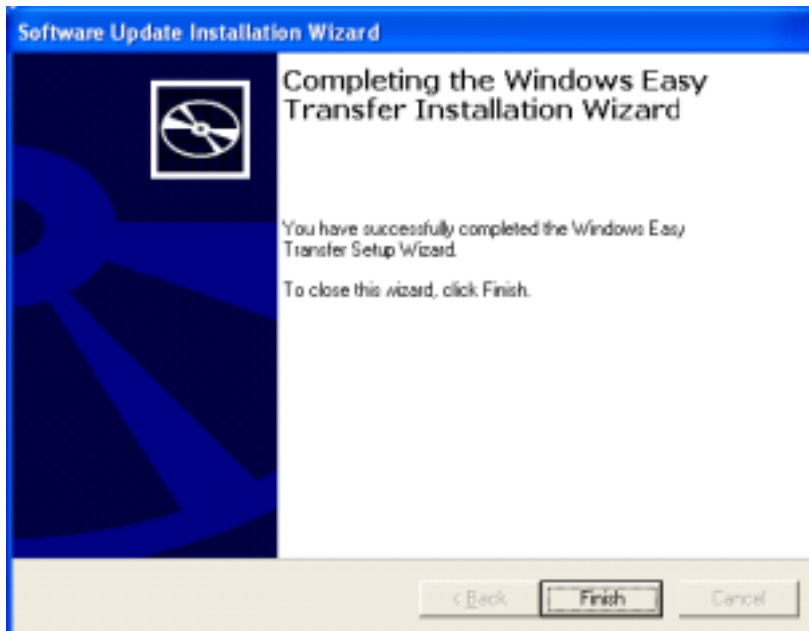


Installing Device Driver

1. Plug the adapter to the USB port on your computer. When asked whether to use Windows Update to search for the device software, select **“No, not this time”** and click **“Next”**.




2. Select “**Install the software automatically (Recommended)**” and click “**Next**”.

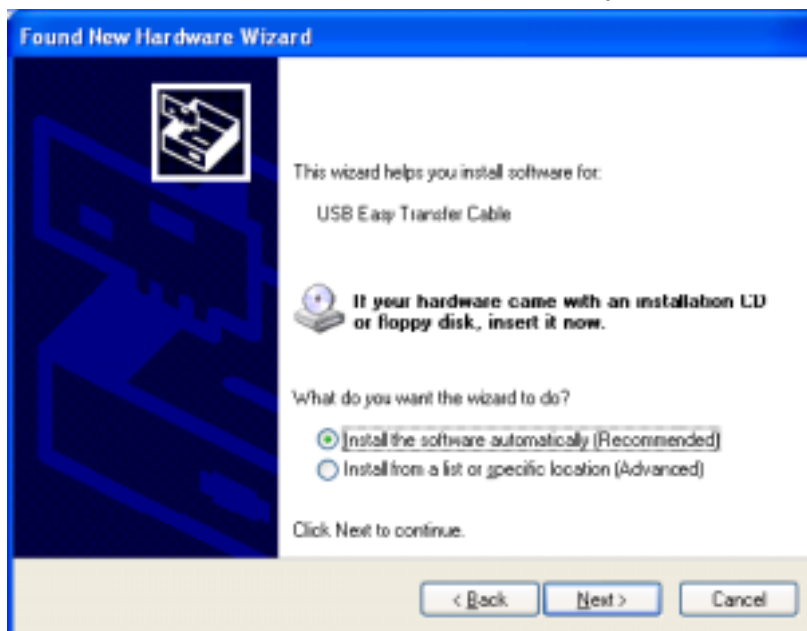

3. Click “**Finish**” to complete the driver installation.



4. When **Easy Transfer Cable** screen appears, you may select to launch **Windows Easy Transfer** now or select **Take no action** as required.

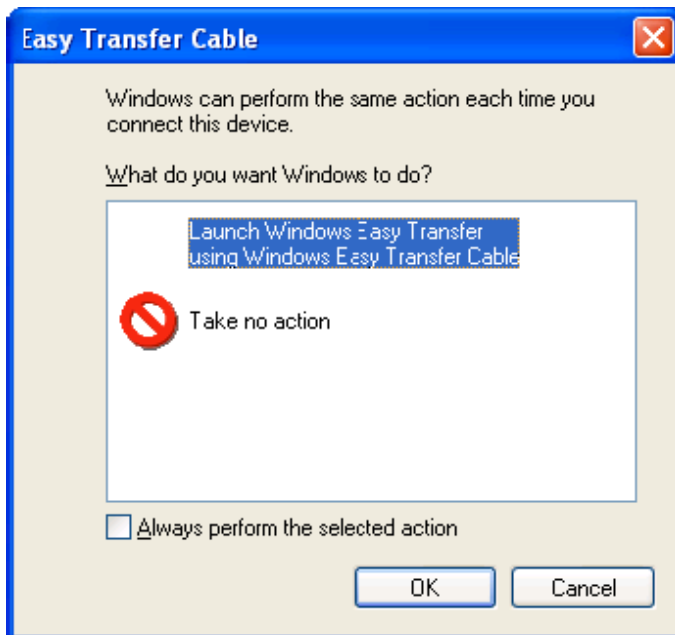

- 3 Transfer files and settings between computer running Windows XP SP2 to another computer running Windows Vista.

Launch Windows Easy Transfer on Both Computers

Windows Easy Transfer is a Windows-based utility that allows two computers to transfer files and settings from a computer running Windows XP, or Windows Vista to another computer running Windows Vista.

To use Windows Easy Transfer, make sure you plug the adapter into the USB ports on both computers and then start Windows Easy Transfer on both computers.

To start the utility:

On Windows Vista: Select **Start > Programs > Accessories > System Tools > Windows Easy Transfer**.

⌚ On Windows XP: Select Start > Programs > Windows Easy transfer.

After launching Windows Easy Transfer, just follow the on-screen instructions. Pay attention to the following notices when you are using the utility:

- ⌚ You must launch Windows Easy Transfer on both computers on which you want to transfer files/settings so that they can detect each other.
- ⌚ Transfer can only be made from Windows XP/Vista to Windows Vista. You **cannot transfer files/settings from Vista to XP**.
- ⌚ When prompted to choose a transferring media, select USB cable.
- ⌚ You can only transfer files/settings between operation systems using the same language. For example, you cannot transfer files/settings from a French system to an English system.

Transfer Example

The following example demonstrates how to transfer files from Windows XP to Windows Vista

WINDOWS XP




WINDOWS VISTA



Select Use a USB PC to PC Cable



At this point you should wait until the message "A connection to the other computer **has been detected**" appears at the bottom.

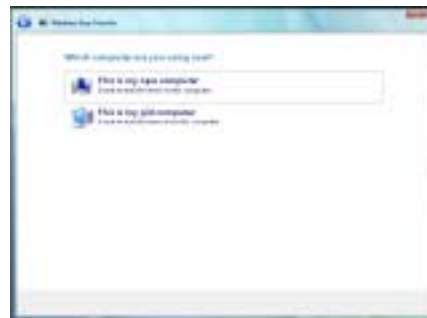

Unless you're making Vista-to-Vista transfer, otherwise you must select **This is my new computer**.



Select **Yes** to unblock the firewall.

The message appears only when the same screen appears on the other compute



Follow the on-screen prompts to select the files you want to transfer.



Wait until the message **“A connection to the other computer has been detected”** appears at the bottom. Then stop at this point.



When this screen appears, your target computer will start receiving files as shown opposite




You will be prompted when the transfer is complete.


4. Install the driver for PCLinq3_Generic_3003

Note: You can directly install the driver for PCLinq3-Generic_3003 under the Windows98,Windows2000,Windows Vista;but under Windows XP SP2,you need to install “ Windows Easy transfer driver” ,please refer to the instruction of the 3rd part ; you need to update SP2 under Windows XP and Windows XP SP1, then you can install “ Windows Easy transfer driver”, at last install “ PCLinq3_Generic_3003 driver” to make sure it is workable.


- 1. Please install according to the following steps.**
- 2. Open your computer and make sure the USB port is workable.**
- 3. Please install “Windows Easy Transfer” driver on the Windows XP computer(Install method please refer to the 3rd part), please directly install “ PCLinq3_Generic_3003” under Windows98 ,Windows2000,Windows Vista.**
- 4. Open the CD driver and find the folder “ USB 2.0 Easy Transfer Cable for Vista Windows\PCLinq3_3003” .**




- 5. Double click “PCLinq3_Generic_3003.exe”, appears the following window : please click “NEXT” to continue installation.**

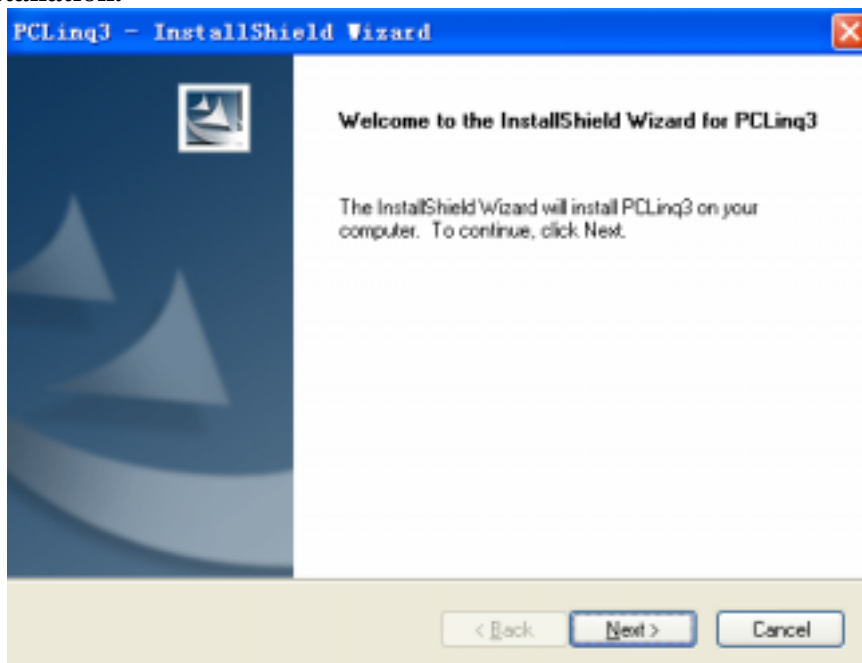


- 6 . Please select “I accept the terms of the license agreement” and click”NEXT” to continue installation.**

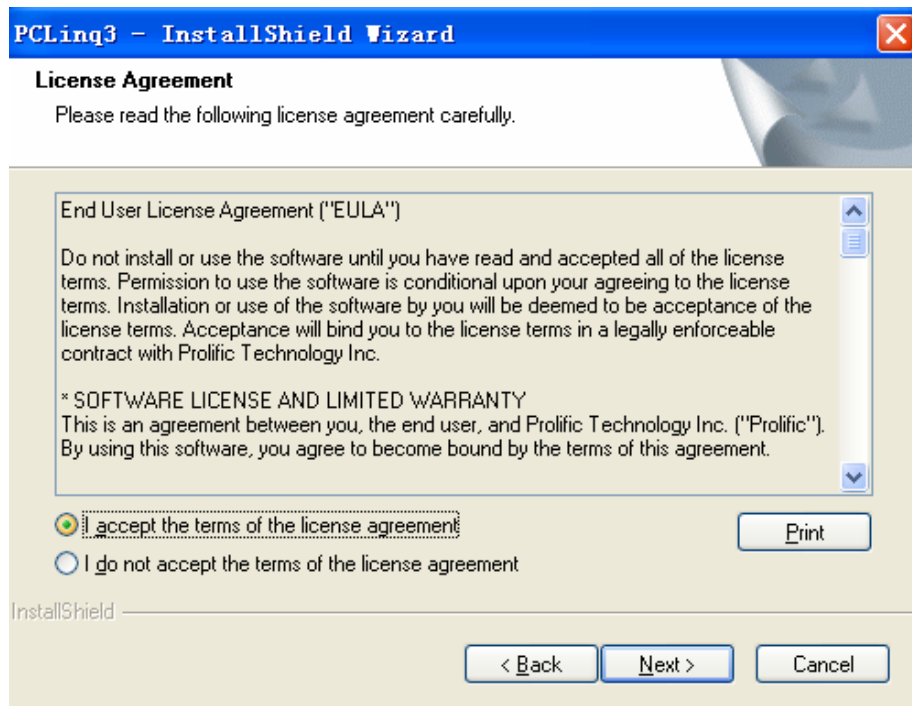

7 : Installation completed, please click “ Finish” to close the wizard .

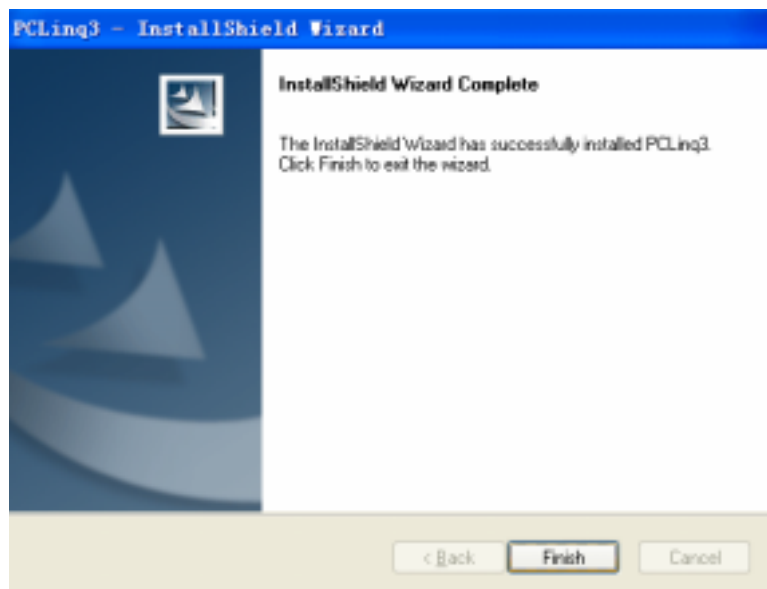

8 . In “ Start---Programs—Prolificpclinq3—PCLinq3 (Ansi)” , you will note driver installation is ok .

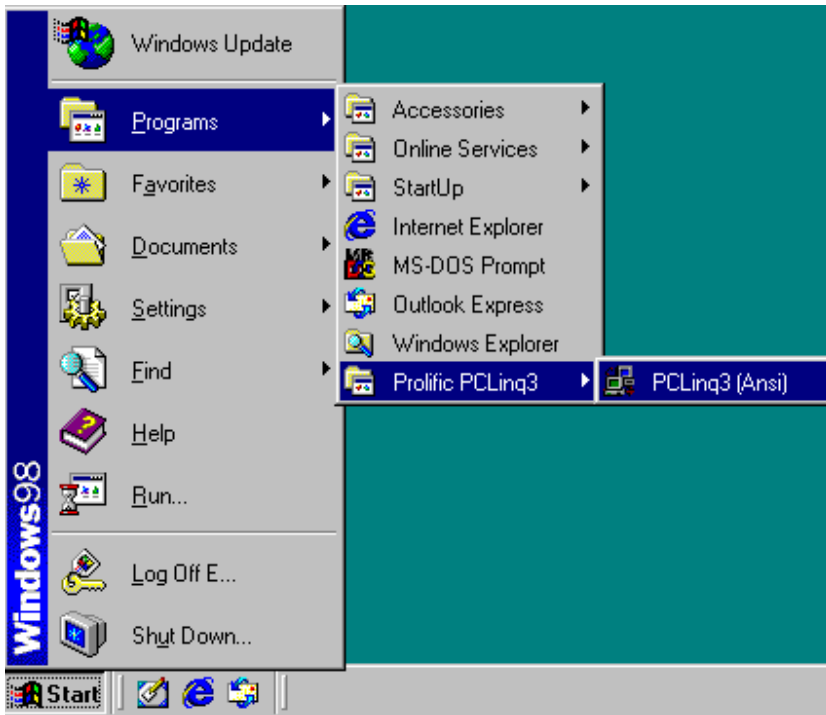


5. Example for file sharing between the computer running Windows98 to another computer running Windows XP SP2.

1. Please connect one USB port of the USB 2.0 Easy transfer cable to the computer running Windows 98 .
3. The Windows 98 computer will find new hardware and start installation automatically.


2. Please connect another USB port of USB 2.0 Easy transfer cable to the computer running Windows XP SP2.
4. The Windows SP2 computer will also find the new hardware and start installation automatically.




5. It will appear the following window under Windows XP SP2, please click “ Cancel” .

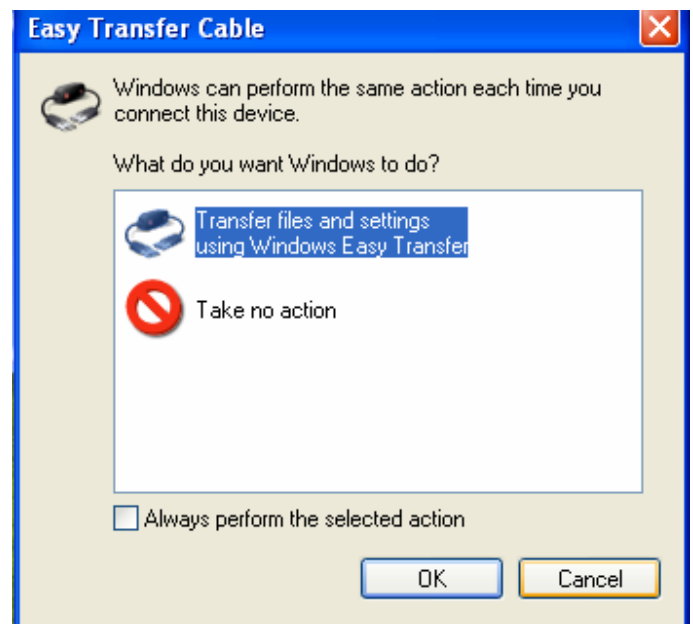


6. You will find “High-speed Usb Bridge Cable” in “System Properties --- Device Manager --- Universal serial Controllers” .

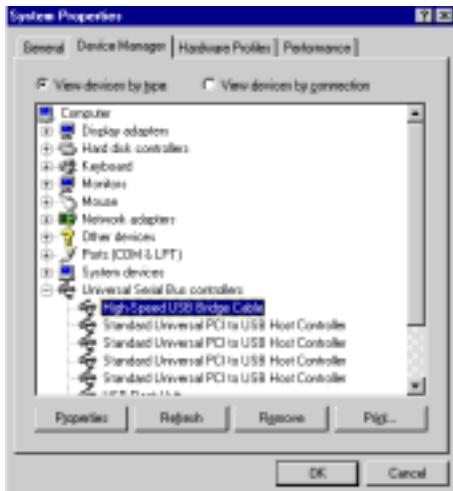



7. You will find “Usb easy Transfer Cable” in “System Properties --- Device Manager--- Transfer Cable devices”.

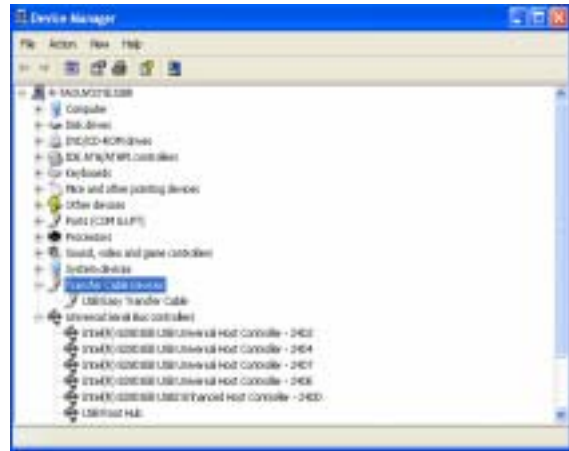


8. Please open “PCLing3(Ansi)” under Windows 98 system.

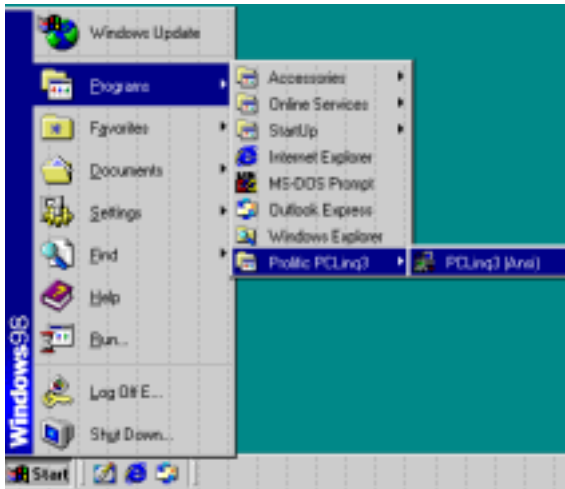


9. Please also open “PCLing3(Ansi) under Windows system.

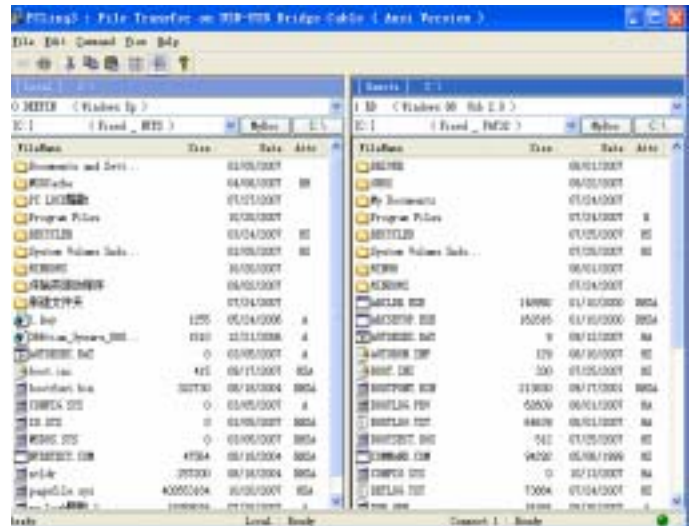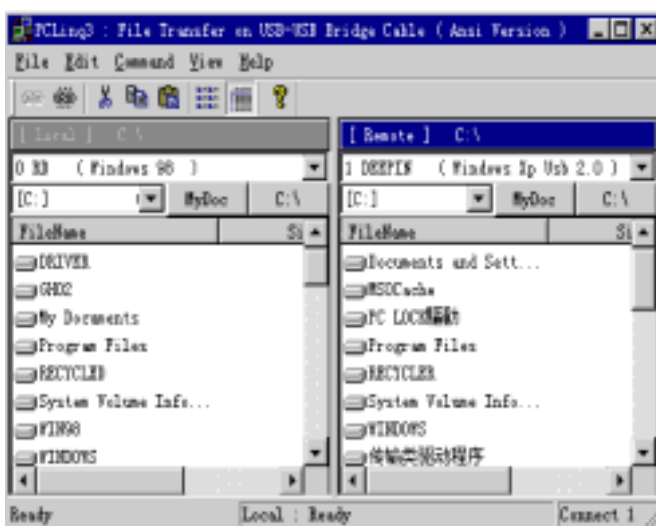


- 10, You will see all the hard disks from Windows XP system under the interface of Windows 98 , also you will see all the hard disks from Windows 98 system under the interface of Windows XP .

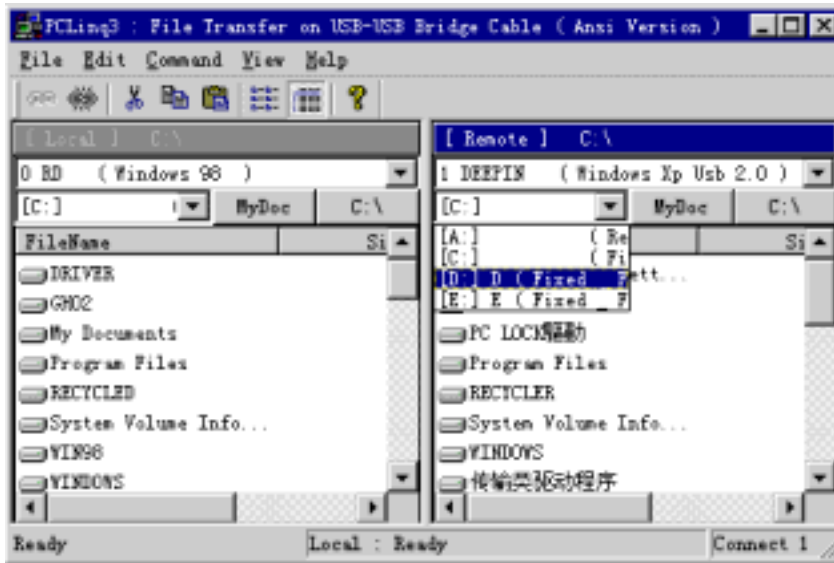


- 11, Please select [Remote] D: \ hard disk as file copy destination .

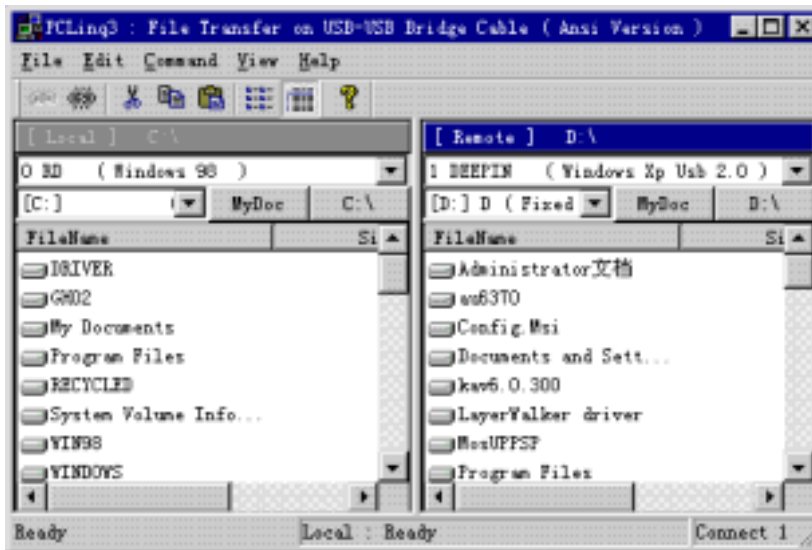

12. Please select “ easy link” in the [Local] C:\ , then right click it and select “ COPY” .

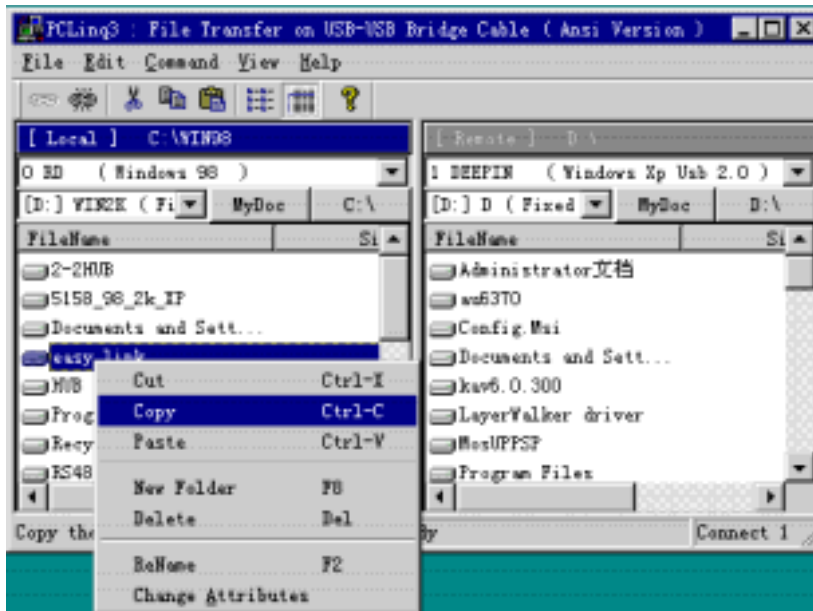

13. In the [Remote] D:\, please right click “Paste”.

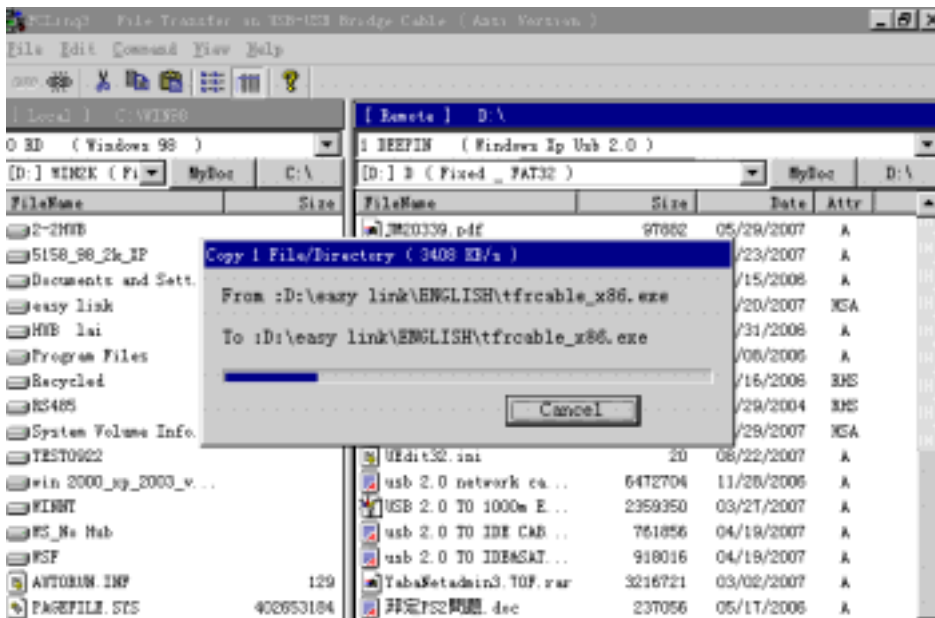

14. After file transfer completed, you can find it in the [Remote] D:\.

